 


# PAIRING AN EXTRA REMOTE

1. Lay the machine with the back of the unit facing up.



2. Remove ONLY the 4 bottom screws

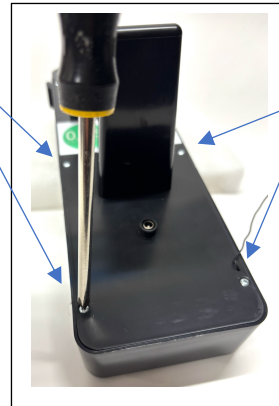

 
3. Connect the power supply




4. Turn the machine on its back and turn on the power



5. Gently separate the top housing from the chassis

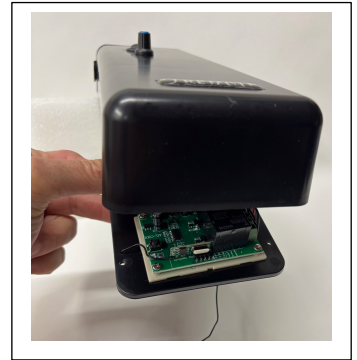

 6. Press and release the "LEARN" button

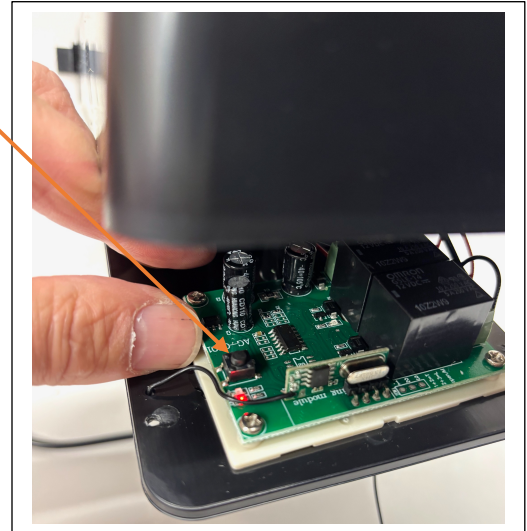

7. Press and release either button on the remote control



8. Replace the 4 screws